



FGPS International DWC-LLC

DWC Business Centre, Dubai Aviation City - Logistics City, Dubai, UAE., PO BOX 390667

Tel: +44 (0)7793 611932

Email: office@fgps.com Web: www.fgps.com

FBComp

OPERATION MANUAL



Release: 5.06
Date: 16 October 2019

Page 1 of 44

COPYRIGHT NOTICE

Copyright © 2000-2019 by FGPS International DWC LLC.
All rights reserved. No part of this manual shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from FGPS Limited. If this manual has been provided in electronic format permission is hereby granted to print one paper copy.

DISCLAIMER

No liability is assumed with respect to the information contained in this manual. Although every precaution has been taken in the preparation of this manual, FGPS Limited assume no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of information contained herein.

TECHNICAL SUPPORT

Support for licensed users on any topics covered in this manual and for the use of the software described herein may be obtained from:

Email: support@fgps.com



TABLE OF CONTENTS

1	Overview	4
1.1	First Break Computational Model	5
1.2	Accuracy Considerations.....	5
2	Main Menu.....	6
2.1	File.....	6
2.2	Tools.....	6
2.3	Help.....	6
3	Project.....	8
4	File Setup	9
4.1	SPS Format.....	9
4.2	Source Files	9
4.2.1	SPS Format.....	10
4.2.2	UKOOA P1/90 Format.....	10
4.3	Receiver Files.....	11
4.3.1	Format.....	11
4.3.2	Output.....	12
4.3.3	Interpolation:.....	12
4.3.4	Components	12
4.4	Data Files	13
4.4.1	Transponder and Receiver Offsets	14
4.4.2	Source Matching	14
4.4.3	Transponder-Receiver Matching	14
4.4.4	Data Format	15
4.4.4.1	User Defined 1 Format	16
4.4.4.2	User Defined 2 Format	18
4.4.4.3	Predefined Formats.....	19
4.4.4.4	Fixed Width Fields.....	19
4.4.4.5	Delimited Fields.....	19
4.4.4.6	Options	20
5	Adjustment Options.....	21
5.1.1	Adjustment Parameters.....	22
5.1.2	First Break Parameters	22
5.1.3	Range, Bearing, USBL Parameters	22
5.1.4	Constrained Receiver Parameters	23
5.1.5	Observation Rejection Parameters	23
5.1.6	Position Rejection Parameters	24
5.1.7	General Parameters	25
5.2	Receivers	26
5.2.1	Constrained Receivers.....	26
5.2.2	List Observations.....	27
6	Running the Adjustment	28



6.1	Receiver Attributes	28
6.1.1	Time Series Plots	28
6.2	Receiver Index	30
6.3	Map Plot	30
6.4	Velocity Plot.....	32
6.5	Depth Computation	33
7	Report.....	33
8	Output	35
8.1	Interpolation.....	35
9	Multiplot	37
9.1	Menu	37
9.2	Toolbar	39
9.3	Plots	40
9.3.1	Selected Plot	40
9.3.2	Active Plot	41
9.4	Series	41
9.4.1	Active Series	41
9.5	Scale	41
9.6	Zooming	42
9.7	Popup Menu	42
9.8	Plot Statistics.....	43
9.9	Data Table.....	43



1 OVERVIEW

FBComp is a Microsoft Windows software program for the computation of OBC survey receiver group coordinates using any combination of acoustic ranges, bearings, USBL X and Y, constrained receiver positions (e.g. from GPS) and first breaks.

The computation of receiver group coordinates requires three initial sets of data:

- Shotpoint or pinger locations in SPS or UKOOA P1/90 format
- Initial receiver group locations (preplots or as-laid locations) in SPS format
- Acoustic and/or first break data in a user defined format



1.1 First Break Computational Model

For first break pick times the position of each receiver is computed independently by the following steps:

1. The algorithm computes the coefficients of the best fit polynomial of user specified order which relates the data – typically, but not necessarily, pick time – to the source to receiver distances derived from the coordinates.
2. An equivalent range for each pick time is computed by applying the polynomial derived in step 1.
3. The receiver coordinates are adjusted by method of least squares using the ranges computed in step 2, as well as any acoustic data if available, optionally rejecting statistically bad data.
4. The sequence of operations is reiterated from step 1 until convergence is achieved, i.e. the maximum adjustment in step 3 does not exceed the user specified convergence criterion.

1.2 Accuracy Considerations

The accuracy of the result depends mostly upon:

- Data quality. This in turn depends on factors such as the consistency of the picking algorithm; and the state of the signal propagation media.
 - Suitability of the order of polynomial chosen. This should typically be one more than the number of velocity layers present.
 - Geometry of distribution of data. It is essential that the distribution of data in any two opposite directions is close to equality. Ideally, data should be as evenly distributed as possible in all directions i.e. they should have a circular, or doughnut shaped, distribution.
 - Homogeneity of the near surface geology. A high horizontal velocity gradient will tend to invalidate the polynomial model for a significant number of picks, resulting in a horizontal bias.
 - The accuracy of the source coordinates.
-



2 MAIN MENU

2.1 File

- New Project:* Invoke the Project Dialog to set up a new project.
- Open Project:* Open an existing project
- Save Project:* Save the current project.
- Save Project As:* Save the current project under a new name.
- Recent Projects:* Open a recently used project.
- Delete Project:* Display the contents of the project folder to delete a project.
- Exit:* Exit the program.

2.2 Tools

- Options:* Set the frequency for which to check for program updates.
- Save Project Defaults:* Save the current set of parameters as the project default settings. The adjustment parameters are not included.
- Load Project Defaults:* Load the previously saved default parameters. The adjustment parameters are not included.
- Save Adjustment Defaults:* Save the current set of adjustment parameters as defaults.
- Load Adjustment Defaults:* Load the previously saved adjustment parameters.

2.3 Help

- Manual:* Displays this manual. An Acrobat reader must be installed.
- Release Notes:* Displays the release notes.
-



Release: 5.06
Date: 16 October 2019

Licence: Displays the licensing dialog.

Check for Updates: Check for program updates. An internet connection is required.

About: Display the software version, licence key, website link and support email link.



3 PROJECT

A project must be created before first time use. To create a new project, from the main menu, select *File | New Project*, and enter a project name.

To save all the parameters and options as described in the following sections select from the menu *File | Save Project* or *File | Save Project As*.

To load a previously saved project select from the menu *File | Open Project*, or *File | Recent Projects*.

The current project name appears in the status bar below the main FBComp window.



4 FILE SETUP

4.1 SPS Format

The software will attempt to automatically detect which SPS format revision (1.0 or 2.1) in which input files are recorded. If it is unable to so (e.g. there is no file header) then the user will be prompted to enter the format revision.

Important: processing will be impossible without the correct format revision specified.

4.2 Source Files

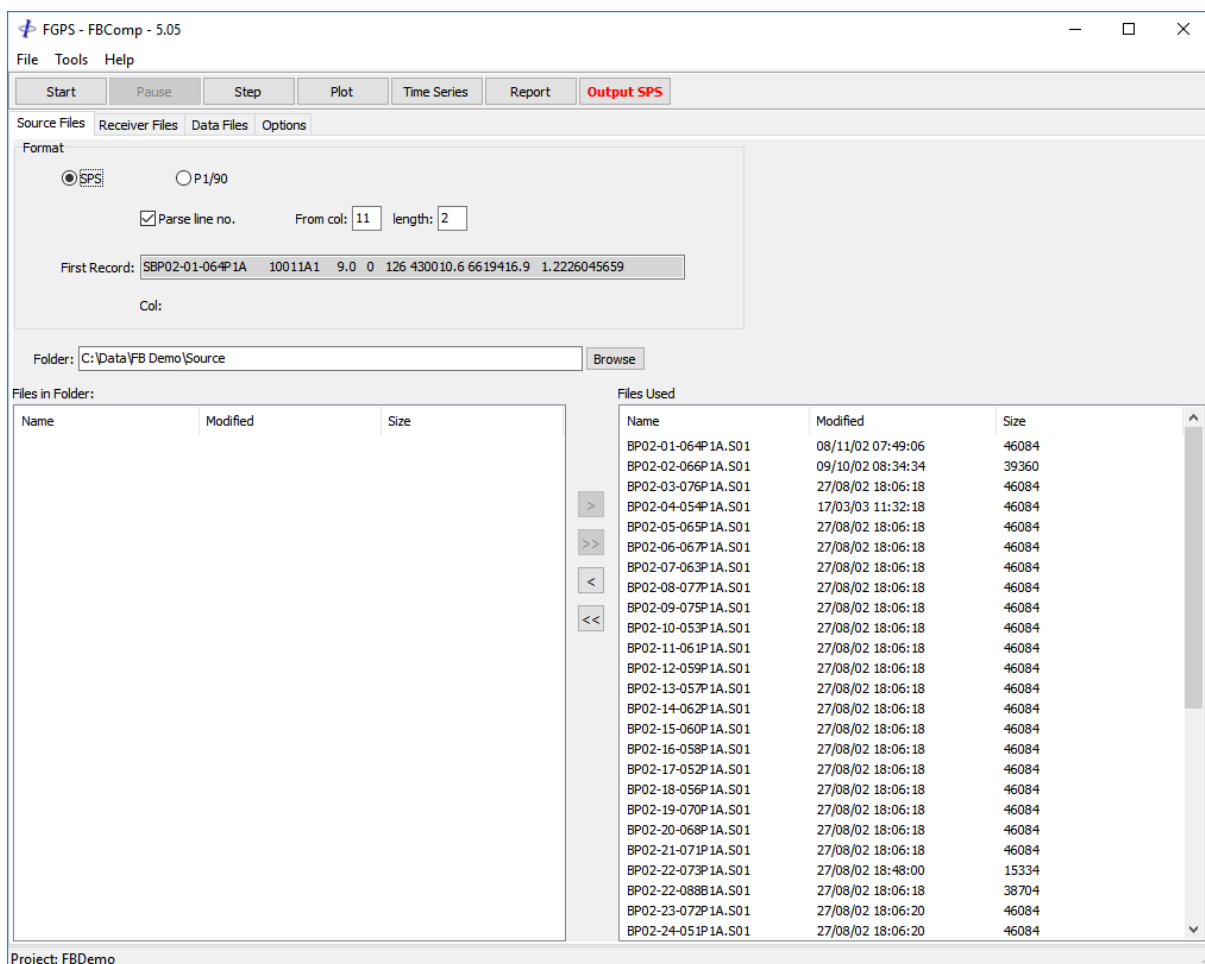


Figure 4-1: Source Files

The source files contain the source locations corresponding to the first breaks or acoustic pings. To select which source files to use set the folder name and use the arrow buttons to select the files.



SPS and UKOOA P1/90 formats are supported, but cannot be mixed i.e. all files must be of the same format.

4.2.1 SPS Format

When specifying source files recorded in the SPS Revision 1 format, the format parameters are used to specify which columns in the SPS records are used to identify the source line number. These are specified by entering the *from col* and *length*. This number corresponds to the source line number specified in the first break data files. The example in Figure 4-1 shows a source line number of 64.

When specifying source files recorded in the SPS Revision 2.1 format, no parsing of the line name field is normally necessary, but may be done if necessary.

For both formats the *Parse line no.* checkbox must be checked to enable parsing.

4.2.2 UKOOA P1/90 Format

When selecting UKOOA P1/90 format the format panel changes to allow the user to specify which record types should be imported. The options are:

<i>Record ID:</i>	Column 1 of the P1/90
<i>Vessel ID:</i>	Column 17
<i>Source ID:</i>	Column 18
<i>Other ID:</i>	Column 19

If any of these fields are non-blank then only records containing specified character in the respective column will be imported, subject to the settings in the remaining columns.



4.3 Receiver Files

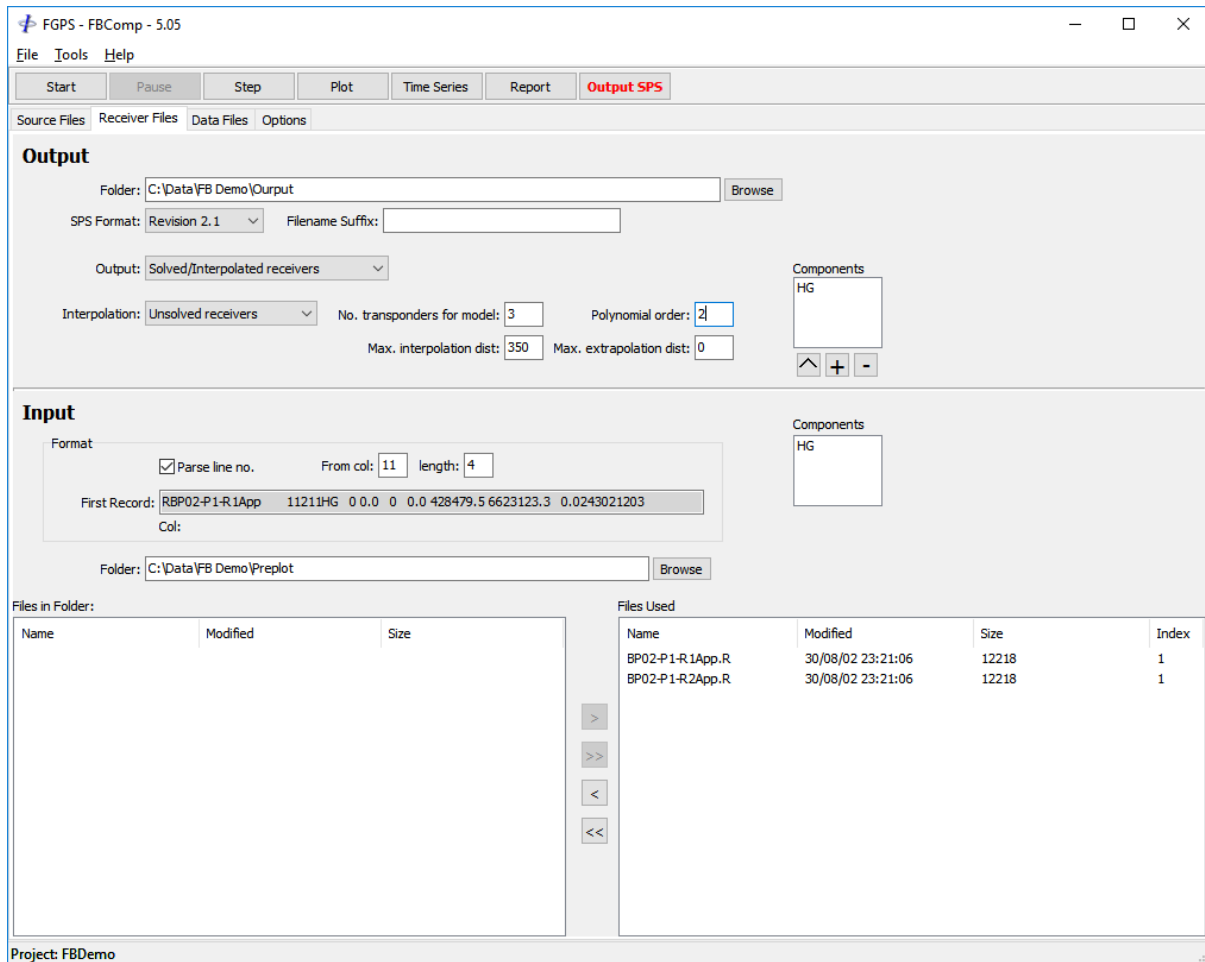


Figure 4-2: Receiver Files

The receiver files contain the initial coordinates of the receivers whose positions are to be solved. These would typically be pre-plot or initial drop locations. The receiver files must be in SPS format. To select which receiver files to use set the folder name and use the arrow buttons to select the files.

4.3.1 Format

When specifying receiver files recorded in the SPS Revision 1 format, the format parameters are used to specify which columns in the SPS records are used to identify the receiver line number. These are specified by entering the *from col* and *length*. This number corresponds to the receiver line number specified in the first break data files. The example in Figure 4-2 shows a receiver line number of 1.



When specifying receiver files recorded in the SPS Revision 2.1 format, no parsing of the line name field is normally necessary, although can be done.

For both formats the *Parse line no.* checkbox must be checked to enable parsing.

4.3.2 Output

For each input SPS receiver file a corresponding output file is in the SPS format and will be written. This file will be identical to the input file except for the computed values – Easting, Northing and optionally depth

Specify the output folder where the output files are to be written. Optionally also specify a filename modifier which will appear in the filename immediately before the filename extension.

Specify which receivers to output:

All Receivers: All receivers will be output. Unsolved receivers will have the instrument code set to “KL”.

Solved/Interpolated Receivers: Only receivers that have been solved or interpolated will be output.

Transponders: For acoustic solutions, output the transponder positions instead of the receiver positions.

4.3.3 Interpolation:

Refer to section 8.1

4.3.4 Components

When the input file is read the input component list is populated with the instrument codes found in the input file. Before exporting the computed SPS file the output component list must be populated using the following buttons:



Add the selected items in the input component list to the output component list.



Define and add a new instrument code, maximum 2 characters.



Remove the selected instrument codes.



4.4 Data Files

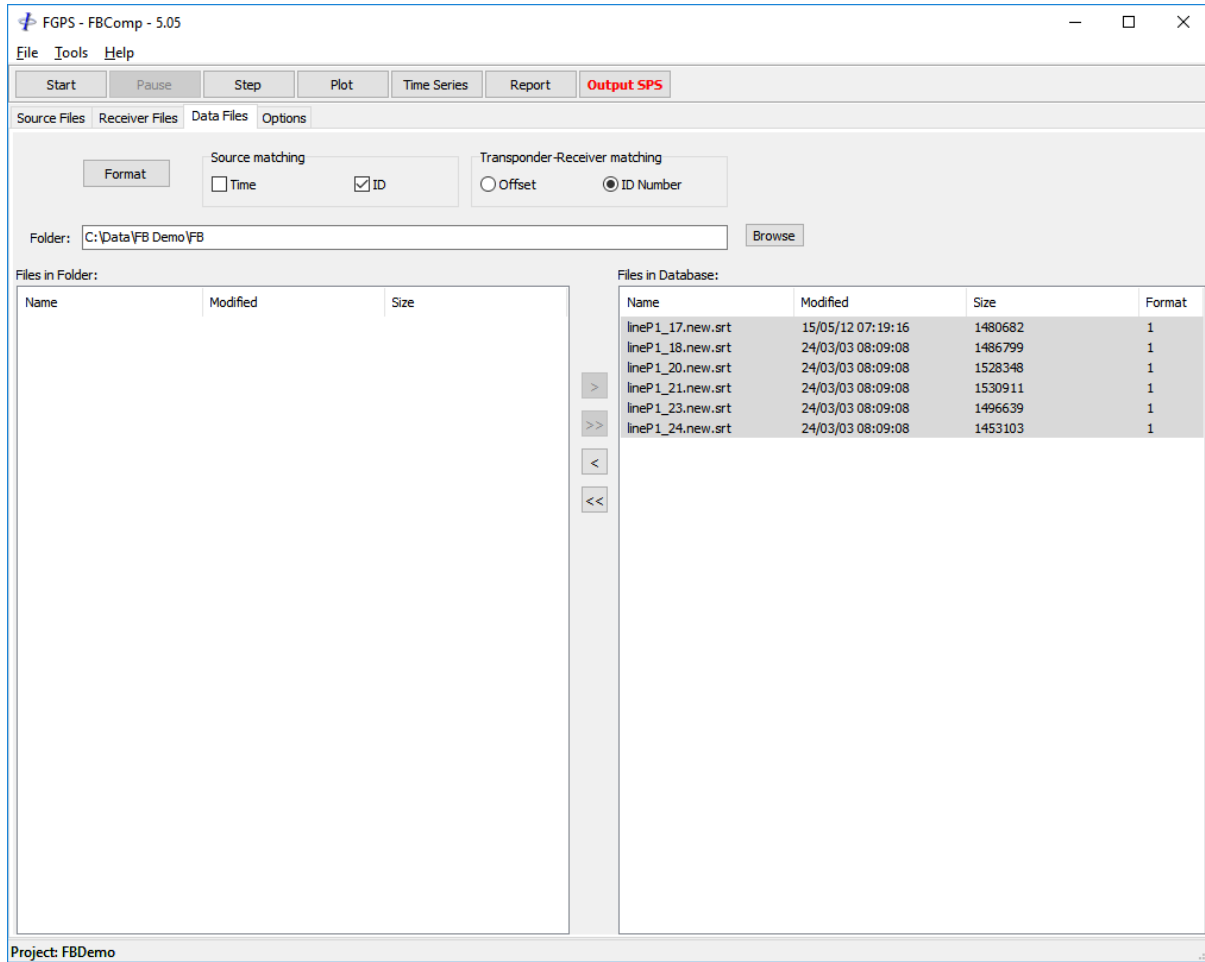


Figure 4-3: Data File Options

The data files contain the actual first break pick times (or acoustic travel times or ranges). To select which data files to use set the folder name and use the arrow buttons to select the files.

The following data types are supported:

- First break pick time
- Acoustic 1-way or 2-way travel time, not including turnaround time
- Acoustic 1-way range
- USBL X
- USBL Y
- USBL Z



- Bearing
- Heading (gyro) for use with USBL data

4.4.1 *Transponder and Receiver Offsets*

For datasets for which the receivers are positioned using acoustic transponders that are not co-located with the receivers, it is necessary to record the offset along the cable for each transponder and receiver. This information is written to the end of the data file output from SeisPos. The format is shown below:

```
[RCVR_Y] 2545407.00    1461.00    0.0  
[TRAN_Y] 2545407.00    1461.00   -12.5
```

4.4.2 *Source Matching*

Time: Sources in the source files will be matched to sources in the data files based on time.

ID: Sources in the source files will be matched to sources in the data file based on line number and SP number.

4.4.3 *Transponder-Receiver Matching*

Offset Transponders in the data files will be matched to receivers in the receiver files based on their offset recorded in the data file.

ID: Transponders in the data files will be matched to receivers in the receiver files based on their line number and station ID.



4.4.4 Data Format

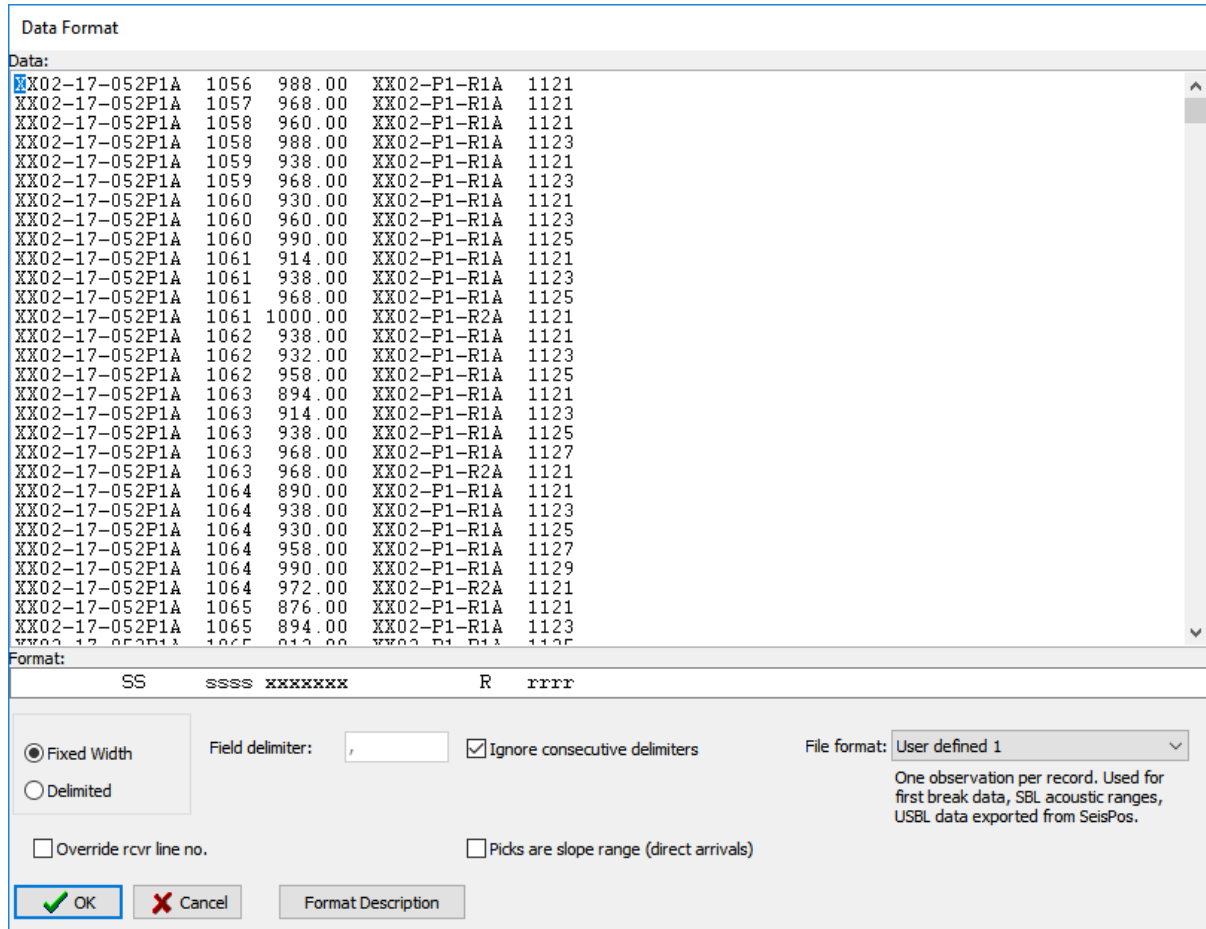


Figure 4-4: Data Files

The format for each file must be specified to tell the program how to read the data in the file. Combinations of different types of files are supported, allowing a hybrid solution for example using first break picks and acoustics, in a single integrated solution for each receiver.

Important: Each file must contain a homogenous set of records.

To set the format first select the files in the *Files in Database* list to which the format is to apply, then click the *Format* button. The format dialog appears and the first selected file will be displayed for reference, as shown in the example in Figure 4-4.

Two basic formats are supported:

User defined 1 Each record contains a single data value, e.g. first break pick time.

User defined 2: Each record contains multiple data values, e.g. USBL range and bearing.



Each record must also contain sufficient information to correlate the data to the source or pinger and receiver.

The record format is described by a format string entered by the user which consists of a series of format specifiers which are characters that describe the various fields.

Note: the format specifiers are case sensitive.

File records must be terminated with a carriage return/line feed or a line feed only (Unix).

4.4.4.1 User Defined 1 Format

Format Specifier	Field in File Record	Description
D	Day of year (Julian day)	Optional. Corresponds to the day in the source file. This should be omitted if the source file does not contain the day.
h	time	Optional. This must be in the format hh:mm:ss, and corresponds with the time in the source file. This should be omitted if the source file does not contain the time.
S	source line number	The number corresponding to the line number specified in the source file, described in section 4.2.1 above. If only one line is present then this may be omitted. If omitted then the line number column as shown in Figure 4-1 must be set to a blank column.
s	shotpoint number	Optional. The shotpoint number or pinger fix number corresponding to the number in the source file. This field is only used if time is not specified.
R	Receiver line number	The number corresponding to the line number specified in the receiver SPS files, described in section 4.3.1 above. If only one line is present then this may be omitted. If omitted then the line number column as shown in Figure 4-2 must be set to a blank column.



Format Specifier	Field in File Record	Description
r	Station number	The receiver number corresponding to the number in the SPS receiver file.
n	Receiver index number	Optional. The index number corresponding to the index in the SPS receiver file.
x	Data value	One of: first break pick time acoustic travel time horizontal range slope range bearing USBL X USBL Y
T	Data type – this describes the type of data present in the data value field.	not specified or T= FB pick time X = USBL X Y = USBL Y H = horizontal range L = slope range or acoustic travel time B = bearing
g	Vessel heading	If using USBL X or Y based on a local coordinate system such as the vessel coordinate frame then this must appear in the same record.
Z	Source/pinger to receiver depth	If specified with slope ranges then slope ranges will be converted to horizontal ranges using the depth value.
D	Transponder delay	Acoustic transponder delay, or turnaround time, in the same units as the data. This value is subtracted from the data value before scale is applied. Optional.



4.4.4.2 User Defined 2 Format

Format Specifier	Field in File Record	Description
h	time	This must be in the format hh:mm:ss, and corresponds with the time in the source file. Note: the total time in any one complete dataset must not exceed a period of 24 hours.
S	source line number	The number corresponding to the line number specified in the source file, described in section 4.2.1 above. If only one line is present then this may be omitted. If omitted then the line number column as shown in Figure 4-1 must be set to a blank column.
s	shotpoint number	The shotpoint number or pinger fix number corresponding to the number in the source file.
R	Receiver line number	The number corresponding to the line number specified in the receiver SPS files, described in section 4.3.1 above. If only one line is present then this may be omitted. If omitted then the line number column as shown in Figure 4-2 must be set to a blank column.
r	Station number	The receiver number corresponding to the number in the SPS receiver file.
H	Horizontal range	
L	Slope range or acoustic travel time	
B	Bearing	
X	USBL X	X coordinate in the coordinate frame whose y-axis orientation is defined by the value in the heading field.
Y	USBL Y	Y coordinate in the coordinate frame whose y-axis orientation is defined by the value in the heading field.



Format Specifier	Field in File Record	Description
Z	USBL depth	Positive down.
g	Vessel heading	If using USBL X or Y based on a local coordinate system such as the vessel coordinate frame then this must appear in the same record.
D	Transponder delay	Acoustic transponder delay, or turnaround time, in the same units as the data. This value is subtracted from the data value before scale is applied. Optional.

4.4.4.3 Predefined Formats

The following predefined formats are supported:

Trackpoint Range: Selecting this format automatically sets the format string to read range data recorded in the Trackpoint II format.

Trackpoint R.B: Selecting this format automatically sets the format string to read range and bearing data recorded in the Trackpoint II format.

Trackpoint X/Y: Selecting this format automatically sets the format string to read USBL X and Y data recorded in the Trackpoint II format.

SeisPos SPSv2.1: Selecting this format automatically sets the format string to read acoustic slope range (m) recorded in the SeisPos format.

After selecting any of the above formats it is still possible to further modify the format string. Examples are:

- to include USBL Z in order to compute depths when selecting the Trackpoint X/Y format.

4.4.4.4 Fixed Width Fields

The format specifiers must match exact file positions

e.g:

```
data: ABC1001P001 1001 S01L1234 0101 768.5  
format: SSSS ssss RRRR rrrr tttt
```

4.4.4.5 Delimited Fields

Only one format specifier is used to represent a field. Any character other than those



specified in sections 4.4.4.1 and 4.4.4.2 will cause that field to be skipped.

The field delimiter character(s) must be specified. A tab character is represented by $\backslash t$.

e.g:

```
data: 1001,1001,skip,1234,0101,768.5,2  
format: Ss#Rrtn  
field delimiter: ,
```

4.4.4.6 Options

Override receiver line number:

There are occasions when the receiver line number as recorded in the input file, usually the preplot, is incorrect or incomplete and therefore does not match the line number that appears in the data records. If this situation arises then the line number may be overridden by checking the *Override rcvr line no.* checkbox and entering the correct line number.

Picks are slope range:

When first break picks are direct arrivals they should be used as slope ranges. In this case check the *Picks are slope range* checkbox.

Note: compute options for acoustics must then be specified and options for first breaks are not used.

Note that since picks are usually recorded in milliseconds it will usually be necessary to apply a scale of approximately 1.5 to the ranges. Refer to section 5.1.3



5 ADJUSTMENT OPTIONS

The screenshot shows the 'Adjustment Options' window in the FGPS software. The window title is 'FGPS - FBCComp - 5.05'. The menu bar includes 'File', 'Tools', and 'Help'. The toolbar contains 'Start', 'Pause', 'Step', 'Plot', 'Time Series', 'Report', and 'Output SPS'. The main area is divided into several sections:

- Adjustment Parameters:** Max. iterations: 50, 10; Convergence: 0.10, 0.100; Force UV to unity (unchecked); Min data value: 200.0, 0.0; Max data value: 800.0, 99999.9.
- First Break Parameters:** Observation SD: 6.0, 5.0; Polynomial order: 3, 2.
- Range, Bearing, USBL Parameters:** Rng/USBL SD: 5.0, 3.0; Rng/USBL Scale: 1.000; Bearing SD (°): 0.0, 0.0; Turnaround Time: 0.0, 0.0.
- Slope range processing:** Compute transponder depths (unchecked); Use fixed pinger depth (unchecked); Pinger depth: 8.0; Use fixed cable depth (unchecked); Cable depth: 0.0.
- Constrained Receiver Parameters:** Observation SD: 10.0, 0.0.
- Observation Rejection:** None (radio selected), Auto Rej (radio); Confidence: 99.9, 99.9; Power: 20, 20; Critical Value: 3.030, 3.030.
- Position Rejection:** Max delta position: 100.0, 50.0; Max SMA: 10.0, 3.0; Max ext reliability: 10.0, 3.0; Max unit variance: 2.0, 1.0; Max symmetry: 90.0, 90.0.
- General Parameters:** Max transponder sep: 100.0, 1000.0.

The central panel shows station data: Line: 1, Station: 1121, Index: 0, E: 428475.8, N: 6623125.8, Depth: not computed, dE: -3.7, dN: 2.5, Unit Variance: 0.34, Deg. Freedom: 566, No. Iterations: 4, SMA: 1.1, Skew: 26°, Ext. Reliability: 0.137, Obs: Line 52 SP 1056, Symmetry E: 16, Symmetry N: 45, Polynomial Coefficients: -125.446 941, 1.679 963, 0.000 144.

The right panel shows a list of transponders with checkboxes for 'Constrain' and 'Failures':

Transponders	Constrain	Failures
Line 0 Transponder 343	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 345	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 347	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 349	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 351	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 353	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 355	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 357	<input checked="" type="checkbox"/>	less than 2 obs
Line 0 Transponder 359	<input checked="" type="checkbox"/>	less than 2 obs
Line 1 Transponder 1121	<input checked="" type="checkbox"/>	
Line 1 Transponder 1123	<input checked="" type="checkbox"/>	
Line 1 Transponder 1125	<input checked="" type="checkbox"/>	
Line 1 Transponder 1127	<input checked="" type="checkbox"/>	
Line 1 Transponder 1129	<input checked="" type="checkbox"/>	
Line 1 Transponder 1131	<input checked="" type="checkbox"/>	
Line 1 Transponder 1133	<input checked="" type="checkbox"/>	
Line 1 Transponder 1135	<input checked="" type="checkbox"/>	
Line 1 Transponder 1137	<input checked="" type="checkbox"/>	
Line 1 Transponder 1139	<input checked="" type="checkbox"/>	
Line 1 Transponder 1141	<input checked="" type="checkbox"/>	
Line 1 Transponder 1143	<input checked="" type="checkbox"/>	
Line 1 Transponder 1145	<input checked="" type="checkbox"/>	
Line 1 Transponder 1147	<input checked="" type="checkbox"/>	
Line 1 Transponder 1149	<input checked="" type="checkbox"/>	
Line 1 Transponder 1151	<input checked="" type="checkbox"/>	
Line 1 Transponder 1153	<input checked="" type="checkbox"/>	
Line 1 Transponder 1155	<input checked="" type="checkbox"/>	
Line 1 Transponder 1157	<input checked="" type="checkbox"/>	
Line 1 Transponder 1159	<input checked="" type="checkbox"/>	
Line 1 Transponder 1161	<input checked="" type="checkbox"/>	
Line 1 Transponder 1163	<input checked="" type="checkbox"/>	
Line 1 Transponder 1165	<input checked="" type="checkbox"/>	
Line 1 Transponder 1167	<input checked="" type="checkbox"/>	
Line 1 Transponder 1169	<input checked="" type="checkbox"/>	
Line 1 Transponder 1171	<input checked="" type="checkbox"/>	
Line 1 Transponder 1173	<input checked="" type="checkbox"/>	
Line 1 Transponder 1175	<input checked="" type="checkbox"/>	
Line 1 Transponder 1177	<input checked="" type="checkbox"/>	
Line 1 Transponder 1179	<input checked="" type="checkbox"/>	
Line 1 Transponder 1181	<input checked="" type="checkbox"/>	
Line 1 Transponder 1183	<input checked="" type="checkbox"/>	
Line 1 Transponder 1185	<input checked="" type="checkbox"/>	
Line 1 Transponder 1187	<input checked="" type="checkbox"/>	
Line 1 Transponder 1189	<input checked="" type="checkbox"/>	
Line 1 Transponder 1191	<input checked="" type="checkbox"/>	
Line 1 Transponder 1193	<input checked="" type="checkbox"/>	
Line 1 Transponder 1195	<input checked="" type="checkbox"/>	
Line 1 Transponder 1197	<input checked="" type="checkbox"/>	
Line 1 Transponder 1199	<input checked="" type="checkbox"/>	
Line 1 Transponder 1201	<input checked="" type="checkbox"/>	
Line 1 Transponder 1203	<input checked="" type="checkbox"/>	
Line 1 Transponder 1205	<input checked="" type="checkbox"/>	
Line 1 Transponder 1207	<input checked="" type="checkbox"/>	

Figure 5-1: Adjustment Options

The various parameters, displayed in the left of the Adjustment Options page, are divided into 7 groups. Click the group button to display or hide the group parameters.



5.1.1 Adjustment Parameters

- Max iterations:* The maximum number of iterations allowed to achieve convergence. The default value of 10 is most appropriate
- Convergence:* The correction to coordinate easting or northing, between iterations, below which the solution is considered to have converged.
- Force UV to unity:* When checked the observation a priori SDs are varied to force the unit variance to be close to 1.
- Min data value:* The minimum data value to be used. Also applies to acoustic range data (see below).
- Max data value:* The maximum data value to be used. Also applies to acoustic range data.

The minimum and maximum pick times can be specified to improve the pick geometry by forcing a more even distribution.

5.1.2 First Break Parameters

- Observation SD:* The a priori standard deviation to be used for all *ranges* i.e. the output of the polynomial function. A value resulting in a mean unit variance of unity should be used.
- Polynomial order:* Order of the polynomial function relating data values to source-receiver distances. As a general guide this should be one more than the number of velocity layers present. For acoustic ranging (1 velocity layer) a value of 2 should be sufficient.

5.1.3 Range, Bearing, USBL Parameters

- Range/USBL SD:* The a priori standard deviation to be used for all range and USBL observations. A value resulting in a mean unit variance of unity should be used.



Release: 5.06
Date: 16 October 2019

Page 23 of 44

Range/USBL scale: The scale to be applied to all range and USBL observations. This value should be 1.0 unless a correction for propagation speed is required e.g. enter a value of 1.5 to correct from acoustic travel time in ms to distance in m for a propagation speed of 1500m/s. The scale may also be used to correct for calibrated speed of sound e.g. if acoustic times have been converted to slope ranges using 1500m/s but the observed speed of sound was 1540m/s then set the scale to $1540/1500 = 1.0267$.

Bearing SD: The a priori standard deviation to be used for all bearing observations. A value resulting in a mean unit variance of unity should be used.

Turnaround Time: The amount, in the same units as the data (usually ms) of the acoustic transponder delay. This value is subtracted from the data value before scale is applied.

Compute Rcvr depths: Check to compute receiver depths. Depths for a receiver will only be computed if there are slope range or USBL Z observations present for that receiver. In very shallow depths the ping geometry may not be sufficient to successfully compute depths in which case this option should not be used.

Use fixed pinger depth: Check this checkbox and enter the pinger depth. This value will be added to receiver depths computed from slope ranges. This should be a positive value.

Use fixed cable depth: Check this checkbox and enter the cable depth. This value will be used to correct slope ranges to horizontal ranges. If the *Use fixed pinger depth* checkbox is checked then the pinger depth value entered will also be used, otherwise the source depth in the source file will be used.

5.1.4 Constrained Receiver Parameters

Observation SD: The a priori standard deviation to be used for all constrained receiver easting and northing observations. A value resulting in a mean unit variance of unity should be used.

5.1.5 Observation Rejection Parameters

None: No statistical testing is performed.



Release: 5.06
Date: 16 October 2019

<i>Auto reject:</i>	If checked, auto-rejection will be implemented: the statistically bad observation will be rejected.
<i>Auto weight:</i>	If checked, a statistically bad observation will be down-weighted.
<i>Confidence:</i>	$100 - \alpha$ where α is the percentage probability of rejecting a good observation. The default value is 99.9.
<i>Power:</i>	The percentage probability that errors the size of the reported marginally detectable errors will be accepted. The default value is 20.
<i>Critical value:</i>	A function of confidence, the normalised residual above which an observation will be rejected or down weighted if auto-rejection or auto-weighting is implemented.

The Delft method of data snooping is implemented for both auto-rejection and auto-weighting i.e. only the worst observation is rejected/down-weighted and the adjustment re-computed. This cycle continues until there are no more failures.

5.1.6 Position Rejection Parameters

<i>Max delta position:</i>	A receiver whose computed position differs from its initial position by more than the specified value will be rejected
<i>Max SMA:</i>	A receiver whose error ellipse (95% confidence) semi-major axis exceeds the specified value will be rejected
<i>Max extern reliability:</i>	A receiver whose computed external reliability exceeds the specified value will be rejected.
<i>Max unit variance:</i>	A receiver for which the adjustment unit variance exceeds the specified value will be rejected.



Release: 5.06
Date: 16 October 2019

Page 25 of 44

Max symmetry: A receiver whose observation symmetry in either the E or N component exceeds the specified value will be rejected. Symmetry is a measure of the evenness of distribution of the observations. A low value indicates good symmetry, a high value indicates poor symmetry. If a receiver has a high reported symmetry then the operator should visually inspect the plot to decide whether or not the distribution of data is too lopsided to provide a reliable position. This can be done by checking and highlighting the receiver in the list and clicking the *Step* button.

5.1.7 General Parameters

Max receiver Sep: Adjacent receivers whose computed positions exceed this separation will be flagged in the report and their positions altered to meet this criterion.

Suppress error msgs: When checked execution will continue if a receiver position cannot be computed. The non-computed receiver will remain marked with a red cross.



5.2 Receivers

All receivers read from the input files appear in the receiver list when the *Plot* button or *Start* or *Step* button is pressed.

Clicking anywhere in the receiver list then pressing the <Esc> key will abort this operation.

For multi-component input files only one receiver for each station will appear in the list. Their status can be reset from the options in the popup menu, shown in Figure 5-2.

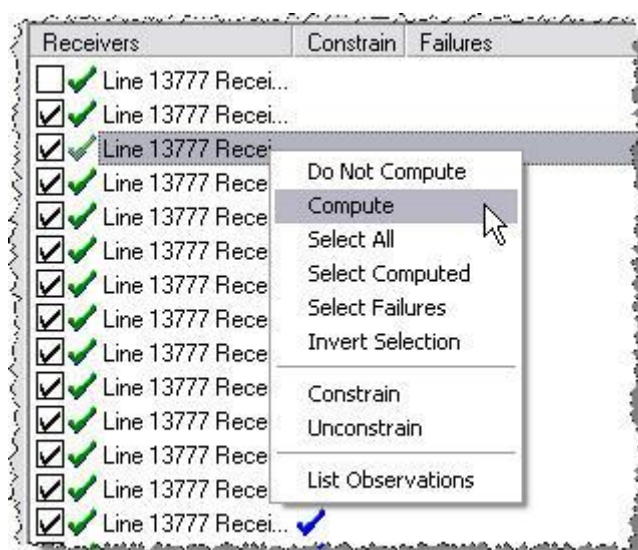


Figure 5-2: Receivers

5.2.1 Constrained Receivers

A situation may arise whereby the initial receiver position is considered accurate enough to be used for the final position, e.g. drop coordinates for receivers in very shallow water with no subsequent movement. To enable this function:

1. Select the receivers which are to be constrained
2. From the receiver list popup menu, as shown in Figure 5-2, select *Constrain*.
3. Set an appropriate a priori SD under the *Constrained Receiver Parameters* group.
4. Save the project to remember these settings.

A blue tick appears in the *Constrain* column for the selected receivers.

The constrained receivers will be computed using all available observations as well as their initial easting and northing.



5.2.2 List Observations

To list all observations associated with receivers:

1. Select the receivers in the list.
2. From the receiver list popup menu, as shown in Figure 5-2, select *List Observations*.

S Line	S Num	R Line	R Num	Type	Raw Value	Gyro	SD	Observed	Computed	Residual	Status
13781	0	13777	23681	USBL-X	-6.2	87.3	5.0	-6.2	-4.5	-1.7	Good
13781	1	13777	23681	USBL-X	-7.9	87.4	5.0	-7.9	-5.0	-2.9	Good
13781	2	13777	23681	USBL-X	-8.1	87.6	5.0	-8.1	-5.8	-2.3	Good
13781	3	13777	23681	USBL-X	-5.8	87.3	5.0	-5.8	-5.2	-0.6	Good
13781	4	13777	23681	USBL-X	-7.3	87.3	5.0	-7.3	-5.7	-1.6	Good
13781	5	13777	23681	USBL-X	-6.7	86.5	5.0	-6.7		-2.4	Good
13781	6	13777	23681	USBL-X	-8.3	87.1	5.0	-8.3		-2.4	Good
13781	7	13777	23681	USBL-X	-7.6	87.0	5.0	-7.6		-1.4	Good
13781	8	13777	23681	USBL-X	-9.1	87.1	5.0	-9.1		-2.3	Good
13781	9	13777	23681	USBL-X	-9.1	87.4	5.0	-9.1		-1.5	Good
13781	10	13777	23681	USBL-X	-8.2	86.9	5.0	-8.2		-1.0	Good
13781	11	13777	23681	USBL-X	-8.6	87.0	5.0	-8.6		-0.8	Good
13781	12	13777	23681	USBL-X	-9.4	86.7	5.0	-9.4		-1.4	Good
13781	13	13777	23681	USBL-X	-10.4	87.1	5.0	-10.4		-1.6	Good
13781	14	13777	23681	USBL-X	-10.7	87.0	5.0	-10.7		-1.1	Good
13781	15	13777	23681	USBL-X	-11.1	87.2	5.0	-11.1		-1.2	Good
13781	16	13777	23681	USBL-X	-12.4	87.3	5.0	-12.4		-1.8	Good
13781	17	13777	23681	USBL-X	-12.4	87.4	5.0	-12.4		-1.6	Good

Figure 5-3: Observations

If the receiver has not yet been computed then the values for SD, Observed, Computed and Residual will be 0.

To filter the listing, for example to look at only one type of observation or one receiver or source, use the *Filter* function from the popup menu, as shown in Figure 5-3.



6 RUNNING THE ADJUSTMENT

When the *Start* button is clicked, the adjustment always starts at the first receiver in the list, and continues until the end, or until the *Pause* or *Stop* button is clicked.

When the *Step* button is clicked, the adjustment starts at the highlighted receiver and is paused after that receiver has been adjusted.

A single receiver may be adjusted by selecting it in the list, checking its checkbox and then clicking the *Step* button.

Once the solution for a receiver has converged the receiver is marked with a green tick and its checkbox is unchecked.

6.1 Receiver Attributes

During adjustment, the centre panel of the *Adjustment Options* page displays the following attributes for the last receiver adjusted:

- Line number
- Receiver number
- Receiver index
- Easting
- Northing
- Depth
- Delta easting (initial to final position)
- Delta northing (initial to final position)
- Unit variance
- Degrees of freedom
- Number of iterations
- Semi major axis of the 95% probability error ellipse
- The orientation of the error ellipse
- External reliability
- The observation which gives rise to the external reliability value
- Symmetry
- The polynomial coefficients

6.1.1 Time Series Plots

The following receiver attributes can be plotted during or after the computation by clicking the *Time Series* button:

- Easting
-



Release: 5.06
Date: 16 October 2019

Page 29 of 44

- Northing
- Depth
- Delta easting (initial to final position)
- Delta northing (initial to final position)
- Unit variance
- Degrees of freedom
- Number of observations input
- Number of observations used
- Semi major axis of the 95% probability error ellipse
- External reliability
- The polynomial coefficients

Refer to section 9 for details of the plot module.



6.2 Receiver Index

If receiver index is specified in the First Break data records then the program will look for a match in the input receiver file. If Only line number and receiver number is matched, i.e. the input file contains only index 1, then a new receiver record with the new index number will be automatically created and output.

6.3 Map Plot

The network plot appears or is updated by clicking the *Plot* button or the *Start* or *Step* buttons.

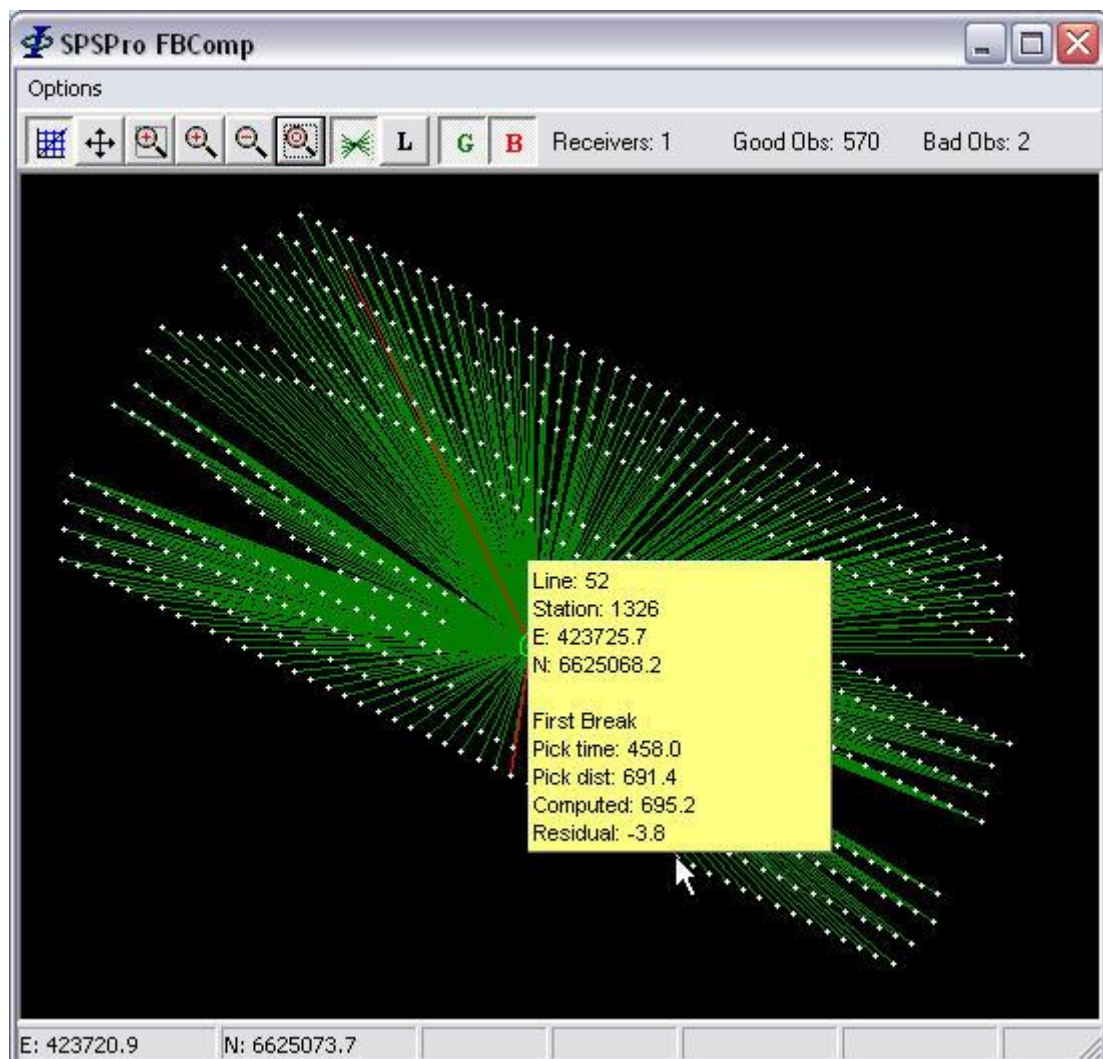


Figure 6-1

When the adjustment is started the map plot changes to display the last receiver adjusted,



along with all the sources from which data is used, as shown in Figure 6-1Figure 7-1.

The following map functions are available from the toolbar:



When depressed the scale along both axes will be the same.



When depressed the image can be panned using the left mouse button.



Fixed Zoom Button, when depressed, zooming in with the left mouse button will zoom tightly around the selected points only. When out, zooming in with the left mouse button will increase the map scale and display scroll bars.



Zoom in.



Zoom out.



Zoom extents.



Toggles between single receiver display and all receiver display.



Toggles receiver and source label display.



Toggles display of un-rejected observations.



Toggles display of rejected observations.



Toggles display of error ellipses.

Data and receiver attributes are displayed by holding the left mouse button down on the source or receiver, as shown in the example in Figure 6-1.

When the mouse cursor is positioned over a station the station type symbol (S or R), line name followed by a hyphen and the station ID is displayed for each station at the cursor location e.g. *S1234-1001* corresponds to shotpoint 1001 on line 1234.

Measurements may be made by drawing a line with the right mouse button.

Click on the *Plot* button to refresh the plot, for example when the file list has changed.



6.4 Velocity Plot

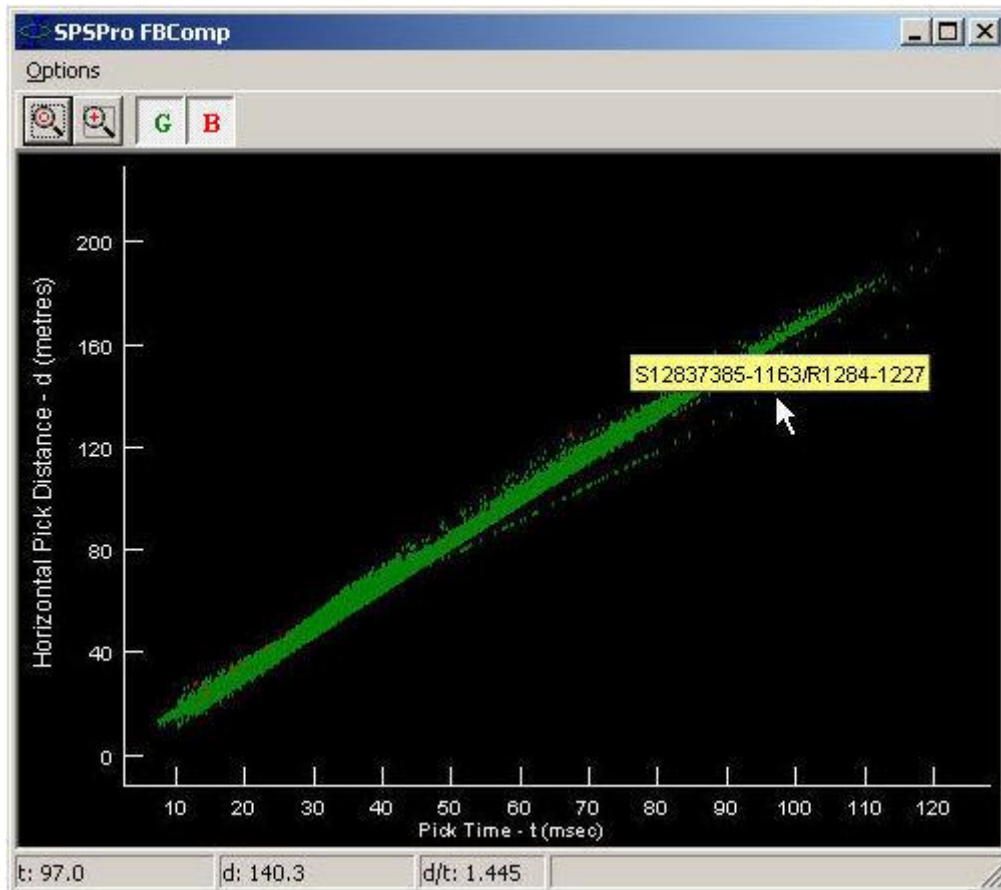


Figure 6-2

During the adjustment the pick time in milliseconds for each observation is plotted against its corresponding computed horizontal distance. Rejected observations, if auto-rejection is used, are plotted in red. Down-weighted observations, if auto-weighting is used, are plotted in yellow.

The toolbar functions are:



Zoom extents.



Fixed Zoom Button, when depressed, zooming in with the left mouse button will zoom to the rectangle only. When out, zooming in with the left mouse button will increase the map scale and display scroll bars.



Plot good picks.



Plot bad picks.

Moving the mouse over the end points of each plot displays the receiver number, as shown in the example in Figure 6-2.

The velocity at the cursor location is displayed in the status bar below the plot..

The velocity plots for all receivers in the same area should be very close. Any departures from the main trend would be indicative of either a significant sudden change in geology, or an inappropriate polynomial function i.e. incorrect order. A single receiver plot may be isolated by zooming in tightly on the plot, with the *Fixed Zoom Button* depressed.

Clicking on a pick will display the network and statistics for the associated receiver.

6.5 Depth Computation

Receiver depths will be computed if acoustic slope ranges are included amongst the observation datasets, and the *Compute Receiver Depths* checkbox is checked. Note however that good vertical geometry is essential in order to obtain a good solution for receiver depth. Ideally some data should be recorded from directly above the receivers. The quality of the depth solution will also be adversely affected if the observations are recorded over significantly different tidal heights.

Depth for the first receiver in the list is initialised to the depth recorded in the input receiver file, or a value of 10 if no depth is recorded. Depths for subsequent receivers are initialised to the last computed receiver's computed depth.

7 REPORT

A new report is created each time a project is opened. This report contains:

- Parameter sets used
- Receiver computation statistics
- Receiver rejection reasons
- Receiver maximum separation failures

Figure 7-1 shows an example report. The red and blue circles indicate how the parameter sets are identified. For this report the parameters were changed prior to running a partial computation.

The report is automatically saved using an incremental file name with the file name and path displayed in the report title bar.



Report options are available from the from the popup menu by right clicking on the report.

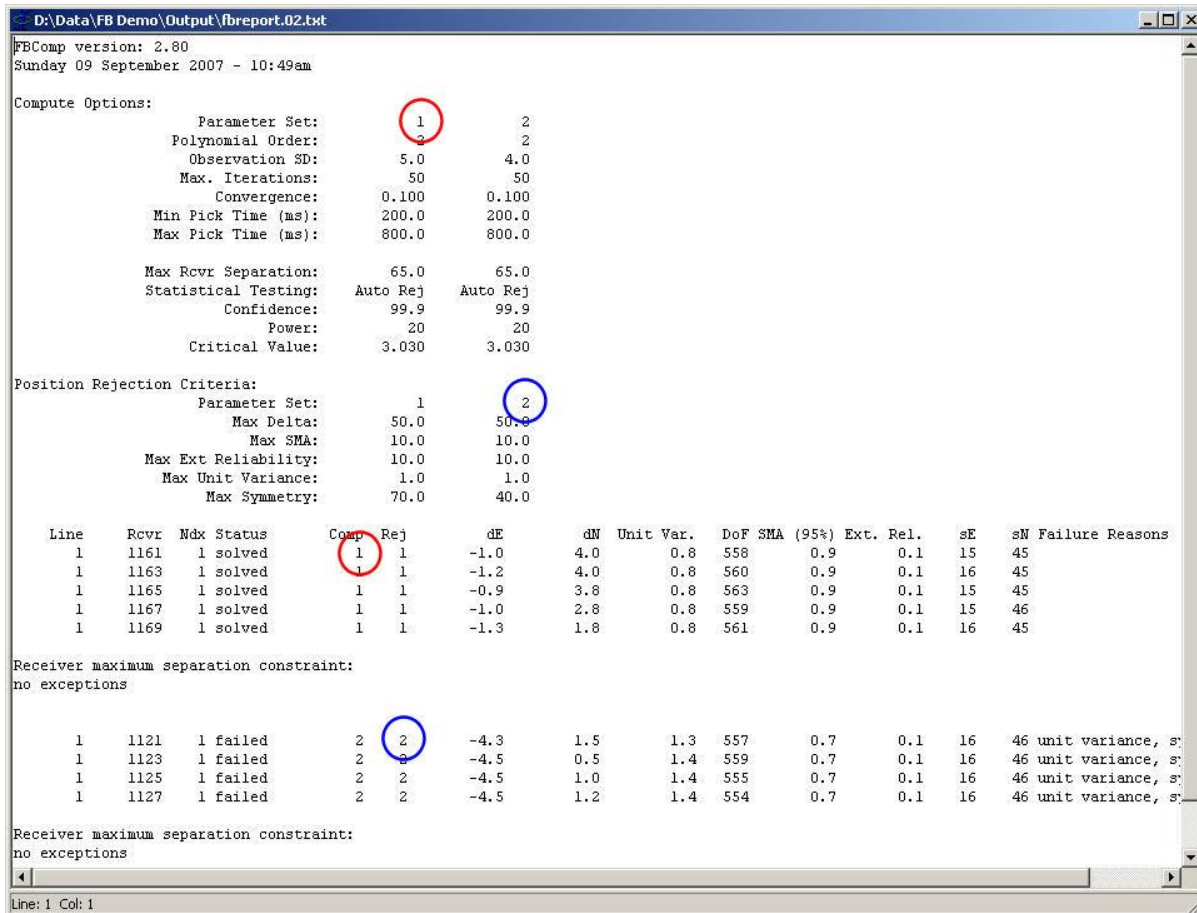


Figure 7-1



8 OUTPUT

To write the output SPS receiver file click the *Output SPS* button.

The output receiver files will be an exact copy of the input receiver files, including header records, with the following exceptions:

- The coordinates will be the computed coordinates.
- For each input receiver one record for each defined component will be output.
- If a receiver computation failed its instrument code will be KL regardless of the instrument codes specified.
- If more than one index is found in the first break data file but not matched in the input file then a new record will be created which is identical to the index 1 record, except that the coordinates will be for the appropriate index.

If the option to compute water depths has been used then water depths exceeding 99.9 will be written as an integer (I4) as opposed to a floating point value (F4.1).

8.1 Interpolation

Interpolation is necessary for acoustic datasets for which the transponders are not co-located with receivers. This will be done using the receiver and transducer offsets recorded in data files produced by SeisPos. Refer to section 4.4.1.

Interpolation is optional for first break datasets or acoustic datasets for which the transponders are co-located with the receivers and are numbered accordingly.

<i>None</i>	No interpolation will be done.
<i>Unsolved receivers:</i>	Only unsolved receivers/transponders will be interpolated.
<i>All receivers:</i>	All receiver will be interpolated.
<i>No. transponders for model:</i>	For linear interpolation set this value to 2. The nearest two solved transponders/receivers either side of the unsolved transponder/receiver will be used. For polynomial smoothing set this value to greater than 2.
<i>Polynomial order:</i>	Set the order to a value less than the number of transponders for the model.
<i>Max. interpolation dist:</i>	Set the maximum distance for interpolation. This should normally be some distance greater than the nominal transponder/receiver separation.



Release: 5.06
Date: 16 October 2019

Max. extrapolation Set the maximum extrapolation distance.
dist:



9 MULTILOT

The multiplot module is the basic interactive time series plotting interface used throughout all FGPS software. Most features are common to all client modules although these modules may support various additional features specific to their application.

This section covers only the common Multiplot features used by all client modules.

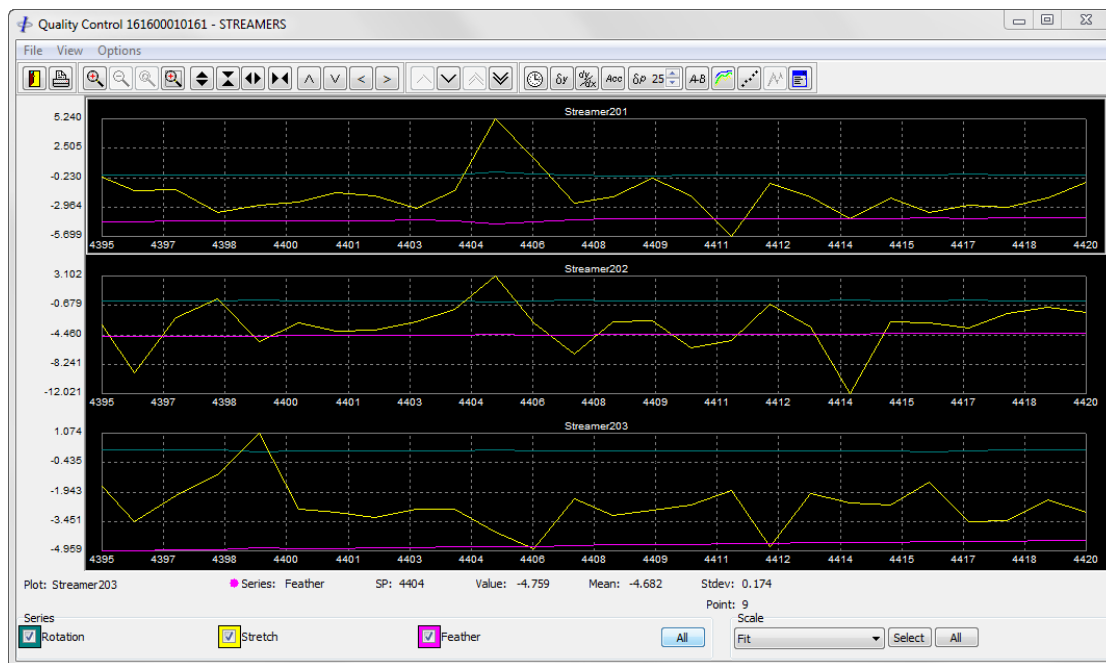


Figure 9-1: Multiplot

9.1 Menu

File

Print Current: Prints the *Selected Plot* as it appears on the screen on one full page using the current printer settings.

Print: Allows selection of multiple plots as shown in figure 15.2. Plots will be printed as seen on the screen.

Printer Setup: Invokes the Windows printer setup dialogue box.



Release: 5.06
Date: 16 October 2019

Save Selected Plot Bitmap: Displays the Save File dialogue box. Saves the *Selected Plot* to a bitmap file.

Save Form Bitmap: Displays the Save File dialogue box. Saves the form to a bitmap file.

Exit: Exits the Precondition module and writes all data to the database if any changes have been made.

View

Zoom Factor: *Allows the default horizontal zoom factor to be changed. The default is 2:1*

Grid Lines: *Toggles grid lines on or off.*

Plots per Screen: *Allows the number of visible plots to be changed to any number between 1 and 10 inclusive.*

Colour: *Allows changing the colours of the individual plot series, interpolated values, edit line, nominal line and cursor lines.*

Cursor: *Allows the horizontal and vertical cursors to be toggled on or off. The default is vertical on, horizontal off.*

List: *Displays the list of all plots. The Selected Plot is highlighted in the list and can be changed by clicking an item on the list.*

Network: *Displays the Network display.*

Options

















Load Palette: *Loads a previously saved palette defining the plotting, edit and cursor colours.*

Save Palette: *Saves the current plotting, edit and cursor colours.*








 




Hotkeys: *Set the Hotkeys for deleting data using the edit line. Ctrl and Alt key combinations are not supported.*



9.2 Toolbar

- : Exits the Precondition module and writes all data to the database if any changes have been made.
 - : Prints the *Selected Plot* as it appears on the screen on one full page using the current printer settings.
 - : Expand the horizontal axis of all plots by the current zoom factor.
 - : Contract the horizontal axis of all plots by the current zoom factor.
 - : Fit the horizontal axis of all plots to the window.
 - : When depressed enables the cursor to be used to zoom into any area of a plot. When up (default) enables the cursor to be used to draw an edit line on a plot.
 - : Expands the vertical scale of the *Selected Plot* by two.
 - : Contracts the vertical scale of the *Selected Plot* by two.
 - : Expands the horizontal scale of the *Selected Plot* by two.
 - : Contracts the horizontal scale of the *Selected Plot* by two.
 - : Pans the *Selected Plot* up by one 20th of the vertical range.
 - : Pans the *Selected Plot* down by one 20th of the vertical range.
 - : Pans the *Selected Plot* left by half the horizontal range.
 - : Pans the *Selected Plot* right by half the horizontal range.
 - : Decrements the *Selected Plot* by one.
 - : Increments the *Selected Plot* by one.
-



- : Displays the previous page according to the number of visible plots.
- : Displays the next page according to the number of visible plots.
- : Toggles the x-axis between shotpoint (default) and time in seconds from the first shot.
- : Toggles all plots between normal and point to point difference.
- : Toggles all plots between normal and rate of change.
- : Toggles all plots between normal and acceleration.
- : Toggles all plots between normal and difference from a least squares polynomial curve of specified order between 1 and 25 fitted through all good points.
- : Plots the difference between the *Selected Plot* and another plot. A plot list appears from which the comparison plot may be selected. Plotted values are the *Selected Plot* minus the comparison plot.
- : Overlays data from other plots selected from the list of all plots.
- : Plots individual data samples as a cross.
- : Plots the nominal value if available.
- : Displays the list of all plots. The *Selected Plot* is highlighted in the list and can be changed by clicking an item on the list.

9.3 Plots

Up to 10 plots can be displayed in one page. The list of plots can be browsed by scrolling using the toolbar buttons, the cursor and page up and down keys, or by selecting from the plot list.

9.3.1 Selected Plot

The *Selected Plot* is highlighted by a white 3D border and is selected by clicking in the plot area with either mouse button. The *Selected Plot* will change when scrolling through the



plots or selecting from the plot list. Some of the toolbar functions are specific to the *Selected Plot* (see above).

9.3.2 Active Plot

The *Active Plot* is the plot which contains the mouse cursor, or the last plot to have contained the mouse cursor if the mouse cursor is outside the plotting area.

The statistics for the *Active Plot* and *Active Series* and mouse cursor position are displayed below the plotting area.

9.4 Series

The available series are displayed in the *Series Panel* located at the bottom left of the window. The visibility of each series for the *Selected Plot* can be toggled by clicking on the series checkbox. Click the *All* button to apply the selection to all plots.

By default only the first series is displayed when the Multiplot module is started.

9.4.1 Active Series

The *Active Series* is indicated by the information immediately below the bottom-most plot. The statistical information displayed always pertains to the *Active Series*. Toggling on a series causes it to become the *Active Series*. If more than one series are displayed the *Active Series* can be changed by clicking on the series name in the *Series Panel*.

9.5 Scale

The y-axis scale of the plotted series for all plots is determined by the scale selected from the dropdown list in the *Series Panel* located at the bottom right of the window. The following options are available for determining the maximum and minimum value plotted:

Series name: Scale by the maximum and minimum value of the selected series.

Fit: Scale to fit the maximum and minimum of all plotted series.

Max/min: Specify a fixed maximum and minimum value.

Mean \pm value: Scale by the mean of the *Active Series* plus and minus a specified value.



Nominal \pm value: Scale by the nominal value of the *Active Series* plus and minus a specified value. This option is only available if nominal values are available.

When selecting one of the last three options above edit boxes appears enabling entry of the specified values.

The default scale is *Fit*.

After selecting the desired scale apply this by clicking one of the buttons adjacent to the scaling option dialog, described below:

Select: Applies the specified scaling options to the *Selected* plot only.

Group: Applies the specified scaling options to all plots in the same observation group (applies only to SeisPos Precondition module);

All: Applies the specified scaling options to all plots.

9.6 Zooming

In addition to the zooming functions in the toolbar, mouse wheel scrolling can also be used.

To zoom horizontally hold down the <Ctrl> key and scroll the mouse wheel.

To zoom vertically hold down the <Shift> key and scroll the mouse wheel.

To zoom horizontally and vertically hold down the <Ctrl> and <Shift> keys and scroll the mouse wheel.

Scroll up to zoom in and down to zoom out.

The centre of the zoom is the position of the mouse cursor.

9.7 Popup Menu

By clicking the right mouse button on any plot, that plot becomes the *Selected Plot* and a popup menu is invoked with the following functions which apply to the *Selected Plot* only:

Table: Display a table of data for all series (see below).



- Overlay key:* Display the colour key for overlaid plots.
- Zoom out:* Zoom out plot to full extent.
- Reset:* Revert to normal from comparison or overlay.

9.8 Plot Statistics

Plot statistics pertaining to the *Active Plot* and *Active Series* are displayed below the plots as the cursor moves from plot to plot. If the plot is zoomed in then the statistics will pertain only to the visible data:

- Name.
- Mean value.
- Nominal value (if available).
- Standard deviation.
- Number of observations.

The following statistics are displayed for the cursor position:

- For data in the shot domain, shotpoint number, or if the *Time/shot* button is depressed the time in seconds from the first shot. For data in other domains e.g. line sequence, the domain name.
- Data sample number (first point being 0).
- Value where vertical cursor intersects the plot. With the left mouse button depressed, the value at the cursor centre.

9.9 Data Table

To display a numeric table for the *Selected Plot* select *Table* from the popup menu in the plot area.

When changing plotted data using the various display options, the data table currently visible will not be updated. There is, however, no limit to the number of tables which can be simultaneously displayed so, for example, it would be possible to display two tables, one showing time and the other showing shotpoint.

The table can be saved to file in comma or space delimited format by selecting *Save Table to File* from the table's popup menu.
